



To connect a 24Vac room thermostat, remove the jumper from terminals 4 and 6, and connect the thermostat wires to the terminals. Leave the jumper between terminals 4 and 5 in place.

To enable the boiler from an external 24Vac source remove both the jumpers, and connect the external 24Vac source to terminals 4 and 5.

**MASCOT 330 WIRING
LAARS VERSION**

